

ElectricKit

Range Cooker Conversion

User Instructions

4 Oven Solid Fuel Deluxe

OILWARM BURNER PRODUCTS

THE WORKSHOP

WHEATCROFT FARM

CULLOMPTON

DEVON

EX15 1RA

TEL: 01884 822916 FAX: 01884 829156

This conversion & connection to electricity supply/supplies must be carried out by a suitably qualified person/persons.

Electrical Ratings 230 Volts 50 Hz 4.2kW This appliance must be earthed!

Turn off power supply/supplies before remove the control cover !

“WARNING: The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.”

“Children less than 8 years of age shall be kept away unless continuously supervised.

The appliance can be used by children aged from 8 years and above and persons with Reduced physical, sensory or mental capabilities or lack of experience and knowledge if

They have been given supervision or instruction concerning use of the appliance in a

Safe way and understand the hazards involved. Children shall not play with the

Appliance. Cleaning and user maintenance shall not be made by children without

Supervision.”

“WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.”

“NEVER try to extinguish a fire with water, but switch off the appliance and then

Cover flame e.g. with a lid or a fire blanket.”

“WARNING: Danger of fire: do not store items on the cooking surfaces.”

“During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.”

“WARNING: Accessible parts may become hot during use. Young children should be kept away.”

“A steam cleaner is not to be used for cleaning the cooking range.”


“Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.”

“If spillage occurs on the hob lid then this should be removed from the lid before opening.”

“Hobs should be turned down to number 4 setting before closing the lids.”

“WARNING: Danger of fire: do not leave flammable items on the hob lids.”

Control Panel

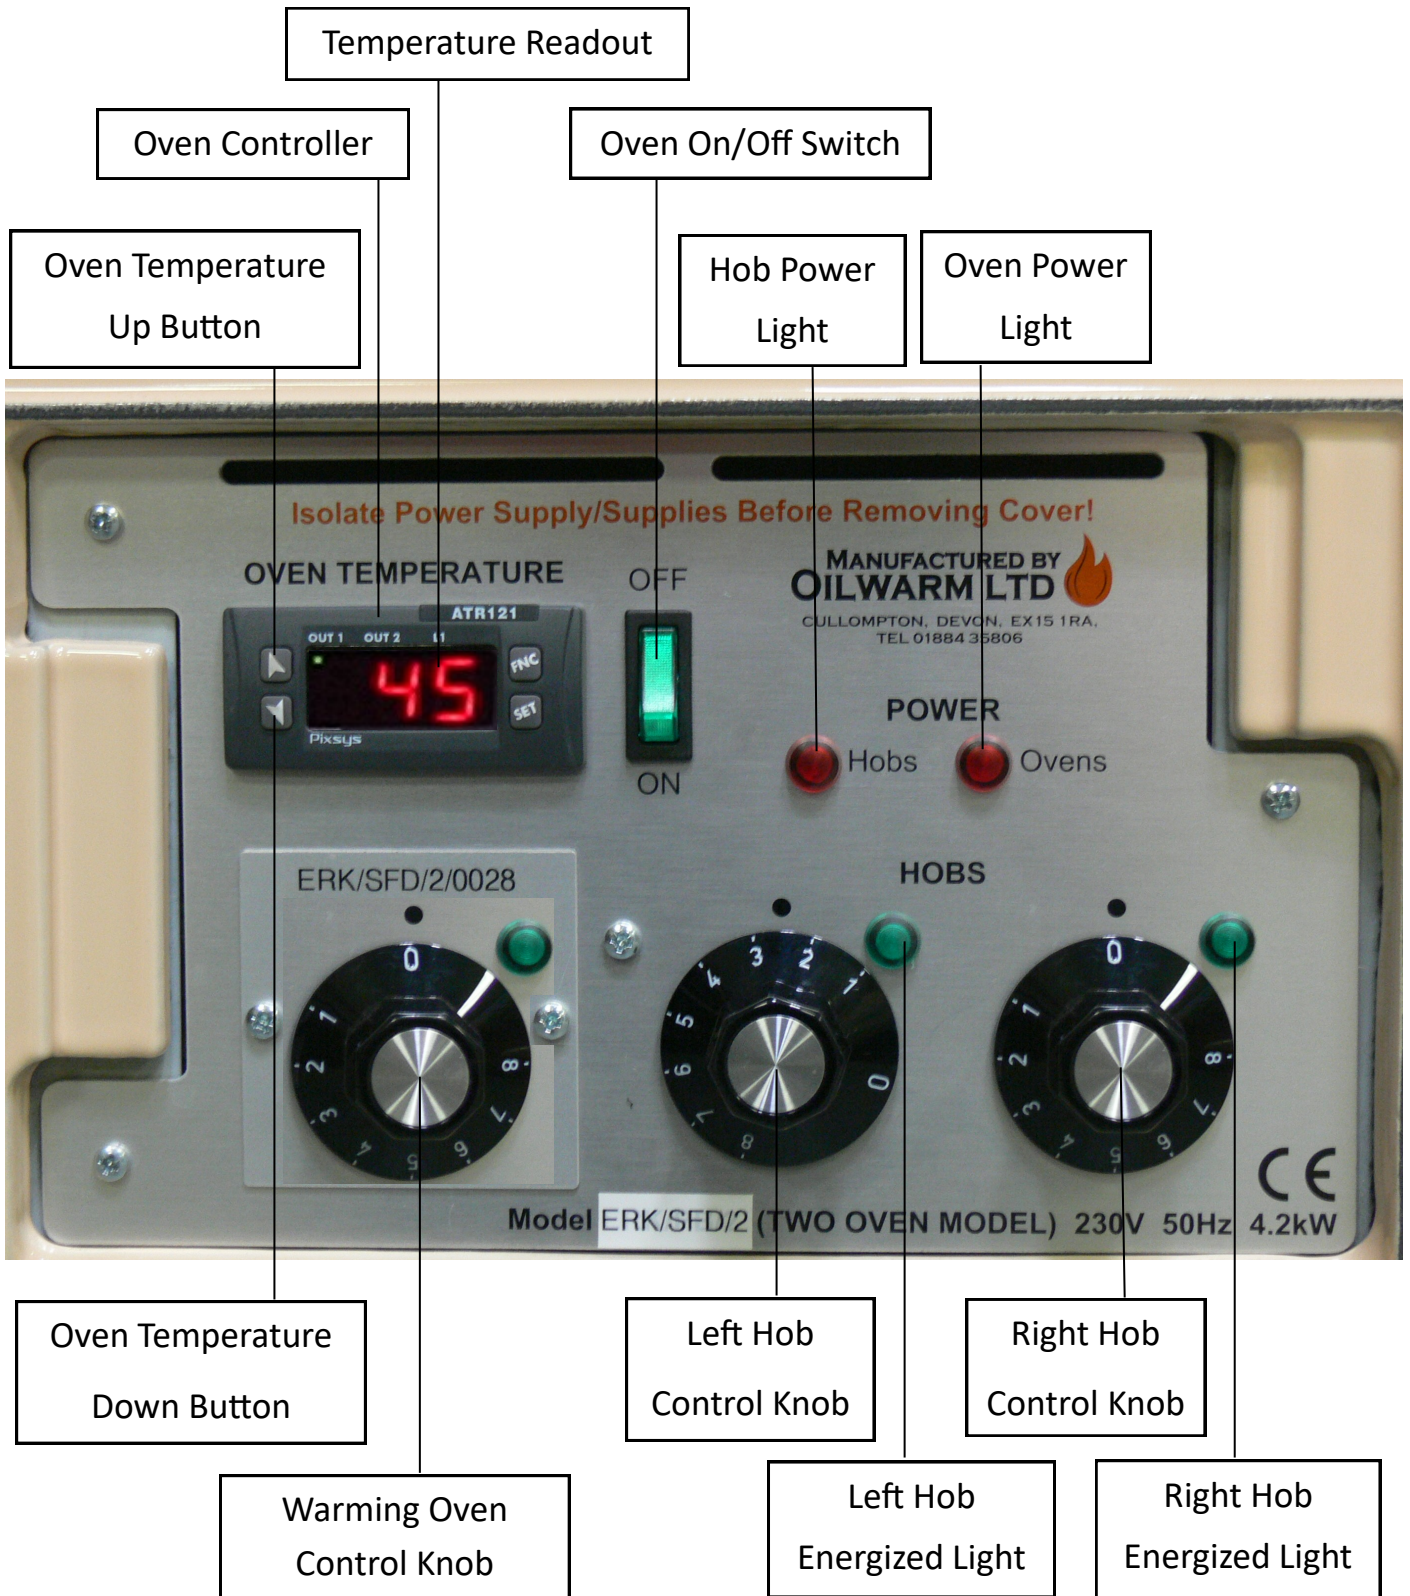

Operating Instructions

Turn the cooker power supply/supplies on at the wall.

Controlling the Ovens

1. Turn the oven on/off switch to the on position, the switch will now become illuminated and the oven will now be turned on.
2. Once the oven controller has run through its start up sequence the oven temperature readout will be displayed. At this point the oven temperature setting can now be adjusted.
3. To adjusted the ovens, press the up  button to increase the oven temperature or the down  button to decrease the oven temperature. Using the up and down buttons, bring the temperature readout to the desired set temperature. By using the up and down buttons, the readout will momentarily show the desired temperature and then return to the actual oven temperature.
4. To turn off the ovens switch the oven on/off switch to the off position.
5. Ovens will return to the temperature they were last set, the next time they are turned on.

Controlling the Warming Oven

1. The oven is controlled by the oven control knob. To turn the oven on, turn the knob clockwise to the desired setting. Number 1 the minimum setting and 8 the maximum setting. The green light next to the knob will illuminated when the oven element is energized.
2. To turn the oven off turn the knob counter clockwise to the off (0) position.

Controlling the Hobs

1. The hobs should be set at no grater than the number 4 position when the hob lids down.
2. The hobs are controlled by the hob control knobs. To turn the hobs on, turn the knobs clockwise to the desired setting. Number 1 the minimum setting and 8 the maximum setting. The green lights next to the knobs will illuminated when the hob elements are energized.
3. To turn the hobs off turn the knobs counter clockwise to the off (0) position.